

Common Causes of Leaks

If the leak indicator is flashing or continuously on, the E-Coder)R900i is indicating that a possible leak may exist. Leaks can result from various circumstances. To better help you identify a possible leak, the following table contains some common causes of leak problems that can occur.

Possible Leaks

Possible Cause of Leak	Intermittent Leak	Continuous Leak
Outside faucet, garden or sprinkler system leaking	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Toilet valve not sealed properly	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Toilet running		<input checked="" type="checkbox"/>
Faucet in kitchen or bathrooms leaking	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Ice maker leaking		<input checked="" type="checkbox"/>
Soaker hose in use		<input checked="" type="checkbox"/>
Leak between the water meter and the house		<input checked="" type="checkbox"/>
Washing machine leaking	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Dishwasher leaking	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Hot water heater leaking		<input checked="" type="checkbox"/>
Watering yard for more than eight hours	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Continuous pet feeder		<input checked="" type="checkbox"/>
Water-cooled air conditioner or heat pump	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Filling a swimming pool		<input checked="" type="checkbox"/>
Any continuous use of water for 24 hours		<input checked="" type="checkbox"/>